

FreeDV User Manual

Jun 10 2026 4ebe052

Contents

1	Introduction	2
2	Getting Started	2
2.1	System Requirements	3
2.2	Easy Setup	3
2.2.1	Sound Card Configuration	3
2.2.2	CAT/PTT control	4
2.2.3	Reporting	4
2.3	Advanced Setup	4
2.3.1	Sound Card Configuration	4
2.3.2	CAT/PTT Configuration	5
2.4	Test Wave Files	6
2.5	Sound Card Levels	6
2.6	Audio Processing	7
2.7	USB or LSB?	7
3	Voice Keyer	8
4	Monitoring TX Audio	8
5	Quick Record	8
6	Multiple Configurations	8
6.1	Executing FreeDV With a Different Configuration (Windows)	9
7	FreeDV Reporting	9
8	QSO Logging	10
9	FreeDV Modes	11
9.1	Multiple Mode Support	11
9.2	FreeDV 700D	11
9.3	FreeDV 700E	12
9.4	FreeDV RADEV1	12
10	Tools Menu	12
10.1	Tools - Filter	12
10.2	Tools - Options	13
10.2.1	Modem Options	13
11	Helping Improve FreeDV	13

12 Multiple Panes in GUI window	13
13 Advanced/Developer Features	14
13.1 Stats Window	14
13.2 Timing Delta Tab	15
13.3 Sound Card Debug	15
13.3.1 Tools - Options dialog:	15
13.4 Full Duplex Testing with loopback	15
13.5 Experimental Features	16
14 Tips	16
15 Common Problems	16
15.1 FreeDV Sets Radio To Wrong Mode	16
15.2 Overdriving Transmit Level	16
15.3 I can't set up FreeDV, especially the Sound Cards	16
15.4 Hamlib does not work with my Icom radio	16
15.5 Hamlib seems not reliable on my Linux machine	17
15.6 I'm using OmniRig and have problems with rig control	17
15.7 I need help with my radio or rig interface	17
15.8 Can't hear anything on receive	17
15.9 Hearing myself whenever I transmit	17
15.10The signal is strong but FreeDV won't get sync and decode	18
15.11Trouble getting Sync with 700D	18
15.12PTT doesn't work. It works with Fldigi and other Hamlib applications.	18
15.13I'm on Windows and serial port PTT doesn't work with my USB to serial adapter.	18
15.14I installed a new version and FreeDV stopped working	18
15.15FreeDV crashes when I press Start	18
15.16FreeDV can't be opened on macOS because the developer cannot be verified	19
15.17I'm on a Mac and my preferred audio device isn't appearing	19
15.18FreeDV doesn't preserve window positions on Linux	19
16 Converting this document to PDF	19
17 Glossary	19
18 Release Notes	20
18.1 V2.4.0 TBD 2026	20
18.2 V2.3.1 May 2026	20
18.3 V2.3.0 May 2026	20
18.4 Earlier than V2.2.0	22
19 References	22

1 Introduction

FreeDV GUI (or just FreeDV) is a GUI program for Linux, Windows, and macOS for running FreeDV on a desktop PC or laptop.

This is a live document. Notes on new FreeDV features are being added as they are developed.

2 Getting Started

This section contains instructions to help you get started.

2.1 System Requirements

FreeDV is officially supported on the following operating systems and versions:

- Windows: Windows 10 and later
- macOS: macOS Big Sur (11.0) and later (ARM and Intel)
- Linux: Ubuntu 22.04 LTS and later, Fedora 42 and later

While it may be possible to execute FreeDV on additional platforms and distributions (especially ones similar to ones currently supported), this is not guaranteed. Any bugfixes required for an unsupported platform may be deferred or rejected, especially if there is impact to supported platforms. Requests for official support of new platforms should go through our existing Feature Request process.

2.2 Easy Setup

Upon starting FreeDV for the first time, the Easy Setup dialog will appear. This is a streamlined setup process for FreeDV optimized for hardware commonly used by amateur radio operators and is divided into three sections:

1. Sound card configuration,
2. CAT/PTT control, and
3. Reporting.

These sections are shown below:

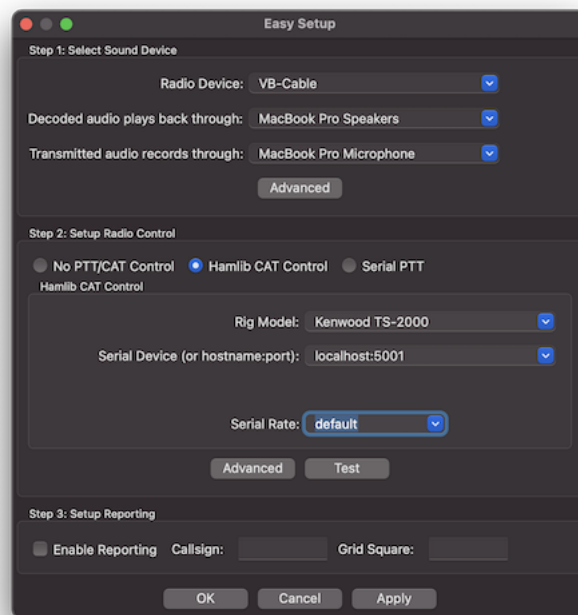


Figure 1: Easy Setup dialog

Note that you can always return to this dialog by going to *Tools - Easy Setup*.

2.2.1 Sound Card Configuration

To configure your sound card(s) using Easy Setup, simply select the sound device associated with your radio and the microphone and speaker devices you wish to use to hear decoded audio as well as to transmit audio.

If you're setting up a receive-only station, you can choose "None" for the transmit audio device.

Additionally, if you are using a Flex 6000 series radio on the Windows platform, FreeDV will automatically select the DAX TX sound device. It is necessary only to select the correct "slice" for the radio sound device and the two devices to use for analog receive and transmit (e.g. your computer's built in microphone and speaker devices).

Note that some configurations (for example, SDR setups involving multiple radio sound devices) may not be able to be configured with Easy Setup. For those, you can choose the "Advanced" button and proceed to "Advanced Setup" below.

2.2.2 CAT/PTT control

Easy Setup supports three methods of radio control:

1. No radio control (e.g. using a VOX audio device such as SignaLink),
2. Hamlib or OmniRig CAT control, and
3. Serial port PTT control.

Simply select the option that matches your radio setup and the required fields will appear. For Hamlib, these are typically the type of radio you're using as well as the serial port it's connected to (or TCP/IP hostname:port). Serial port PTT control requires the serial port your radio is using as well as whether your radio's PTT is triggered via the RTS or DTR pin (and the required polarity for either).

If required, the "Advanced" button in this section will allow you to configure PTT input (e.g. for a footswitch) and additional VOX related options. The "Test" button will emit a constant carrier on the selected radio sound device as well as enable PTT to allow you to adjust your radio sound levels (see "Sound Card Levels" below).

2.2.3 Reporting

While not required, it is recommended to enable reporting so that others can see who is currently receiving them. This also allows the FreeDV application to control the radio's frequency and mode. Both sides of a contact must have this enabled in order for contacts to be reported. To configure reporting, simply enable the feature here and enter your callsign and current grid square/locator.

For more information about the reporting feature, see the "FreeDV Reporting" section below.

2.3 Advanced Setup

2.3.1 Sound Card Configuration

2.3.1.1 Receive Only (One Sound Card) For this setup, you just need the basic sound hardware in your computer, for example a microphone/speaker on your computer.

1. Open the *Tools - Audio Config* Dialog
2. At the bottom select *Receive* Tab
3. In *Input To Computer From Radio* select your default sound input device (usually at the top)
4. In the *Output From Computer To Speaker/Headphones* window select your default sound output device (usually at the top)
5. At the bottom select *Transmit* Tab
6. In *Input From Microphone To Computer* window select *none*
7. In *Output From Computer To Radio* window select *none*
8. Press OK to close the dialog

When you press Start FreeDV will start decoding any incoming signals on the microphone input, playing the decoded audio out of your speaker. If no valid FreeDV signals are received, no audio will be played.

If you connect the microphone input on your computer to your radio receiver, you can decode off air signals. If you have a rig interface, try configuring that as the *From Radio To Computer* device, with your computer's sound card as the *From Computer To Speaker/Headphone* device.

If you don't have anyone to transmit FreeDV signals to you, try the test wave files in the next section.

2.3.1.2 Transmit/Receive (Two Sound Cards) For TX/RX operation you need to configure two sound cards, by setting up Tools - Audio Config *Transmit* and *Receive* Tabs.

When receiving, FreeDV off-air signals **from** your radio are decoded by your computer and sent **to** your speaker/headphones, where you can listen to them.

When transmitting, FreeDV takes your voice **from** the microphone, and encodes it to a FreeDV signal in you computer which is sent **to** your radio for transmission over the air.

Tab	Sound Device	Notes
Receive Tab	Input To Computer From Radio	The off air FreeDV signal from your radio rig interface to your computer
Receive Tab	Output From Computer To Speaker/Headphones	The decoded audio from your computer to your Speaker/Headphones
Transmit Tab	Input From Microphone To Computer	Your voice from the microphone to your computer
Transmit Tab	Output From Computer To Radio	The FreeDV signal from your computer sent to your rig interface for TX

2.3.1.3 Changing Audio Devices If you change audio devices (e.g. add or remove sound cards, USB hardware), it's a good idea to check the Tools/Audio Config dialog before pressing **Start**, to verify the audio devices are as expected. This is particularly important if any audio devices e.g. Headsets, USB Sound Cards, or Virtual Cables have been disconnected since the last time FreeDV was used.

Hitting **Refresh** in the lower left hand corner of the Tools/Audio Config will normally update the audio devices list. Keeping a screen shot of a known working configuration will be useful for new users. Unexpected audio configuration changes may also occur following a Windows updates.

Another solution is to re-start FreeDV and check Tools/Audio Config again after changing any audio hardware.

2.3.2 CAT/PTT Configuration

The Tools->CAT and PTT Config dialog supports three different ways to control PTT on your radio:

- VOX: sends a tone to the left channel of the Transmit/To Radio sound card
- Hamlib: support for many different radios via the Hamlib library and a serial port (or via TCP/IP for some devices, e.g. SDRs or FLrig/rigctld).
- Serial Port: direct access to the serial port pins

You may also optionally configure an additional serial port for PTT input. This can be useful for interfacing devices like foot switches to FreeDV. If configured, FreeDV will switch into transmit mode (including sending the needed Hamlib or serial commands to initiate PTT) when it detects the configured signal.

Once you have configured PTT, try the **Test** button.

Serial PTT support is complex. We get many reports that FreeDV PTT doesn't work on a particular radio, but may work fine with other programs such as Fldigi. This is often a mismatch between the serial parameters Hamlib is using with FreeDV and your radio. For example you may have changed the default serial rate on your radio. Carefully check the serial parameters on your radio match those used by FreeDV in the PTT Dialog.

Also see Common Problems section of this manual.

2.3.2.1 Hamlib Hamlib comes with a default serial rate for each radio. If your radio has a different serial rate change the Serial Rate drop down box to match your radio.

When **Test** is pressed, the “Serial Params” field is populated and displayed. This will help track down any mismatches between Hamlib and your radio.

If you are really stuck, download Hamlib and test your radio’s PTT using the command line `rigctl` program.

2.3.2.2 Icom Radio Configuration If using an Icom radio, Hamlib will use the radio’s default CI-V address when connecting. If this has been changed, you can specify the correct address in the “Radio Address” field (valid values are 00 through FF in hexadecimal).

Note that “00” is the “wildcard” CI-V address. Your radio must have the “CI-V Transceive” option enabled in order for it to respond to commands to that address. Otherwise, FreeDV must be configured to use the same CI-V address as configured in the radio. For best results, ensure that there are no other Icom/CI-V capable devices in the chain if “00”/“CI-V Transceive” is used.

2.3.2.3 Changing COM Port On Windows If you change the COM port of a USB-Serial device in Device Manager, please unplug and plug back in the USB device. Windows/FreeDV won’t recognize the device on the new COM Port until it has been unplugged/plugged.

2.4 Test Wave Files

In the installation are audio files containing off-air FreeDV modem signals. There is one file per FreeDV mode and are in the following locations depending on platform:

Platform	Typical Location
Windows	C:\Program Files\FreeDV [version]\share\freedv-gui\wav
Linux	/usr/share/freedv-gui/wav or /usr/local/share/freedv-gui/wav
macOS	See https://github.com/drowe67/freedv-gui/tree/master/wav

To play these files, first select a FreeDV mode and press Start. Then choose a file using “Tools - Start/Stop Play File From Radio”. You should then hear decoded FreeDV speech.

These files will give you a feel for what FreeDV signals sound like, and for the basic operation of the FreeDV software.

2.5 Sound Card Levels

Sound card levels are generally adjusted in the computer’s Control Panel or Settings, or in some cases via controls on your rig interface hardware or menus on your radio. In-app adjustments can also be done using the **TX Attenuation** control on the right-hand side of the main window. The << and >> buttons adjust by 1.0 dB and the < and > buttons adjust by 0.2 dB; the mouse scroll wheel can also be used to generate 0.2dB steps whilst hovering anywhere over the TX Attenuation control area. Values below 0 dB attenuate the transmit signal.

When FreeDV is running, you can observe the sound card signals in the main window tabs (From Radio, From Mic, To Speaker).

1. On receive, FreeDV is not very sensitive to the **From Radio** level, adjust so it is mid-range and not clipping. FreeDV uses phase shift keying (PSK) so is not sensitive to amplitude.
2. The transmit level from your computer to your radio is important. On transmit, adjust your level so that the ALC is **just** being nudged. More **is not better** with the FreeDV transmit signal. Overdriving your transmitter will lead to a distorted transmit signal, and a poor SNR at the receiver. This is a very common problem.

Right-clicking on the **TX Attenuation** control top row opens a context menu with the following options for the currently active amateur band:

- **Enable auto-save of TX atten for [band]** — saves the current level for that band and enables automatic saving whenever the band is left or the program is closed. The menu item changes to **Disable auto-save of TX atten for [band]** once enabled, which removes the saved value and stops auto-saving.
- **Restore TX atten level for [band]** — reverts the attenuation to the last auto-saved value for that band, useful for recovering a known good level after experimenting during a session.

The **Control** panel (right-hand side) contains a **Tune** button which outputs a continuous 1500 Hz carrier for antenna matching, netting etc. While Tune is active the TX Attenuation controls adjust the tune signal level rather than the normal transmit level.

Right-clicking the Tune button opens a context menu with the following options:

- **Set tune output to minimum (-30 dB)** — immediately sets the tune attenuation to its lowest output level without transmitting, useful for safe low-power antenna tuner testing.
- Per-band **Enable/Disable auto-save** and **Restore** options, similar to those described above for TX attenuation (shown only when a band is known).

FreeDV will automatically detect band changes (via Hamlib or OmniRig CAT, or manual frequency entry) and load any saved attenuation value for the new band. When a band is left the current values for that band are saved immediately.

3. FreeDV 700D and 700E can drive your transmitter at an average power of 40% of its peak power rating. For example 40W RMS for a 100W PEP radio. Make sure your transmitter can handle continuous power output at these levels, and reduce the power if necessary.
4. Adjust the microphone audio so the peaks are not clipping, and the average is about half the maximum.

2.6 Audio Processing

FreeDV likes a clean path through your radio. Turn all audio processing **OFF** on transmit and receive:

- On receive, DSP noise reduction should be off.
- On transmit, speech compression should be off.
- Keep the receive audio path as “flat” as possible, no special filters.
- FreeDV will not work any better if you band pass filter the off air received signals. It has its own, very tight filters in the demodulator.

2.7 USB or LSB?

FreeDV currently follows the same conventions for upper and lower sideband as are used for amateur SSB. As an aid to this, FreeDV will show the current mode on the bottom of the window upon pressing the Start button if Hamlib is enabled and your radio supports retrieving frequency and mode information over CAT. If your radio is using an unexpected mode (e.g. LSB on 20 meters), it will display that mode on the bottom of the window next to the Clear button in red letters. When a session is not active, Hamlib isn't enabled, or if your radio doesn't support retrieving frequency and mode over CAT, it will remain grayed out with “unk” displaying instead of the mode (for “unknown”). ## Transceiver Filters

For most FreeDV use, your radio's receive and transmit filters should be set to the widest possible (typically around 3 kHz). This allows easy switching between analog mode as well as the various FreeDV modes. There has not been any testing done to definitively confirm whether narrower bandwidths help with reception of FreeDV. Additionally, FreeDV already performs its own transmit filtering, so using additional narrow filtering on the radio will likely have little benefit (again, untested).

For reference, the channel widths of the currently supported modes are below:

Mode	Width (kHz)
1600	1.125
700D	1.000
700E	1.500
RADEV1	1.500

3 Voice Keyer

The Voice Keyer Button on the front page puts FreeDV and your radio into transmit, reads a wave file of your voice to call CQ, and then switches to receive to see if anyone is replying. If you press the space bar or click the PTT button, the voice keyer stops. If a signal with a valid sync is received for a few seconds the voice keyer also stops.

The Audio tab inside Tools-Options can be used to select the wave file, set the RX delay, and number of times the TX/RX cycle repeats.

Additional options are also available if you right-click on the Voice Keyer button:

- “Use another voice keyer file”: Allows you to trigger the voice keyer using a different file from the one configured in Tools->Options.
- “Record new voice keyer file”: Triggers transmit and records your microphone audio to a file that you select. Pushing the Voice Keyer button will stop recording.
- “Monitor transmitted audio”: Allows monitoring of audio while transmitting the voice keyer file. If enabled, a checkmark will appear next to this option.

4 Monitoring TX Audio

FreeDV has the ability to monitor transmit audio. This can be useful for adjusting microphone filters when your radio is plugged into a dummy load. To enable this, right-click on the PTT button and choose “Monitor transmitted audio”. A checkmark will appear next to this menu option when enabled.

5 Quick Record

To quickly record incoming signals from the radio, a ‘Record’ button is provided in the main window. Clicking this button will create a file beginning with the name “FreeDV_FromRadio” and containing the current date and time. Clicking ‘Record’ again will stop recording.

The Audio tab inside Tools-Options allows control of where these recordings are saved. By default, this is inside the current user’s Documents folder.

6 Multiple Configurations

By default, FreeDV uses the following locations to store configuration:

- Linux: \$XDG_CONFIG_HOME/freedv/freedv.conf (see below)
- macOS: ~/Library/Preferences/FreeDV Preferences
- Windows: Registry (HKEY_CURRENT_USER\SOFTWARE\freedv)

On Linux, XDG_CONFIG_HOME defaults to ~/.config if not explicitly overridden. Note that if you are not running the AppImage, the behavior is different if your distro does not include wxWidgets 3.3 or newer. In those cases, the default configuration file location is ~/.freedv, which is the same as in prior versions of FreeDV.

If you'd like to store the configuration in another location (or store multiple configurations), FreeDV accepts the -f (or -config) command line arguments to provide an alternate location. An absolute path is recommended here; however, if only a relative path is provided, it will be relative to the following locations:

- Linux: ~/
- macOS: ~/Library/Preferences/
- Windows: C:\Users\[username]\AppData\Roaming

You can also save and restore different configuration files by using the Tools->Export Configuration and Use Configuration menu items. These menu options allow for switching of configurations without restarting FreeDV. Note that restoring a configuration file does not modify the default configuration. However, the last restored configuration file will be loaded the next time FreeDV starts, unless you choose Tools->Load Default Configuration or restore a different configuration file.

6.1 Executing FreeDV With a Different Configuration (Windows)

On Windows, you can create shortcuts to FreeDV with different file names for the “-f” command line option as described above. To create a shortcut, right-click on the Desktop or in File Explorer and choose New->Shortcut. Click on Browse and navigate to one of the following paths:

- C:\Program Files\FreeDV [version]\bin\freedv.exe
- C:\Program Files (x86)\FreeDV [version]\bin\freedv.exe (if the 32 bit version is installed on a 64 bit machine)

Click Next and give the shortcut a unique description (e.g. “FreeDV IC-7300”). Then push Finish to create the shortcut.

Once the shortcut has been created, right-click it and choose Properties. Find the Shortcut tab in the resulting dialog box and add “-f” followed by the desired filename to the end of the text in the Target field. Do not add any other quote marks.

For example, to use a file called IC7300.conf stored in the Hamradio directory on the C drive the Target field should appear as follows:

“C:\Program Files\FreeDV [version]\bin\freedv.exe” -f C:\Hamradio\IC7300.conf

7 FreeDV Reporting

FreeDV has the ability to send FreeDV signal reports to various online spotting services by enabling the option in Tools-Options (in the Reporting tab) and specifying your callsign and Maidenhead grid square. When enabled, this causes FreeDV to disable the free form **Text Msg** field and only transmit the **Callsign** field. As this uses a different encoding format from the free-form text field, both sides of the contact must have this enabled for the contact to be reported.

FreeDV validates the received information before submitting a position report. This is to ensure that FreeDV does not report invalid callsigns to the service (e.g. ones that don't exist or that correspond to real non-FreeDV users). However, if the reporting function is disabled, all received text will display in the main window even if it has errors.

The following services are currently supported and can be individually enabled or disabled along with the reporting feature as a whole:

- PSK Reporter (using the “FREEDV” mode)
- FreeDV Reporter – also accessible via the Tools->FreeDV Reporter menu option.

The frequency that FreeDV reports is set by changing the “Report Frequency” drop down box in the main window. This is either in kilohertz (kHz) or megahertz (MHz) (configurable by going to Tools->Options->Rig Control and checking or unchecking “Frequency entry in kHz”) and will turn red if the entered value is invalid. If Hamlib support is also enabled, this frequency will automatically remain in sync with the current VFO

on the radio (i.e. if the frequency is changed in the application, the radio will also change its frequency). Double-clicking on users in the Tools->FreeDV Reporter window will also cause this frequency to change to match the other user.

Note: in some setups (such as when using ALE), it is not preferred to have the reporting frequency automatically be in sync with the radio. For example, in the case of ALE, the radio's frequency changes multiple times per second while waiting for a contact, which is faster than FreeDV can pull the latest from the radio (every five seconds). This can be disabled by enabling "Manual Frequency Reporting" in Tools->Options.

The FreeDV Reporter window includes a **Message:** field that allows you to broadcast a short status message (such as your location, antenna, or current activity) to other FreeDV Reporter users. Type a message and click **Send** to broadcast it, or **Clear** to remove the current message.

*Note: messages are only broadcast when reporting is enabled in Tools->Options->Reporting and the **Reporting** toggle button in the main window is on.*

Messages are not saved automatically. To save a message for later reuse, right-click the **Send** button to open a context menu with the following options:

- **Send and save message** — broadcasts the message and adds it to the saved list
- **Only save message** — adds the message to the saved list without sending it

Saved messages are kept in a drop-down list of up to 15 entries, sorted alphabetically. Click the arrow on the **Message:** field to view and select from saved messages. Right-clicking on any entry in the list opens a context menu with options to:

- **Add** a new message to the list
- **Edit** the selected message
- **Delete** the selected message from the list

FreeDV will also show the callsigns of previously received signals. To view those, click on the arrow next to the last received callsign at the bottom of the window. These are in descending order by time of receipt (i.e. the most recently received callsign will appear at the top of the list).

8 QSO Logging

FreeDV supports integration with external logging utilities that support the WSJT-X logging protocol (for example, KLog). This can be enabled by going to Tools->Options->Reporting and enabling the "Enable QSO Logging" option. By default, it sends packets to "localhost" (127.0.0.1) port 2237, but this can be changed if the logging computer is elsewhere on the network.

Once FreeDV decodes a callsign, it will appear in the drop-down list on the bottom of the main window. To log this contact (or any other contact received by the application), simply choose that callsign from the list and click the "Log QSO" button on the left side of the window. You will then see a dialog box that will let you enter any additional information about the contact. Upon clicking the OK button, this information will be transmitted to your logging tool.

You can also log a contact if they're using FreeDV Reporter. Simply left-click on a row in the FreeDV Reporter window and then click on the Log QSO button. This will autofill the callsign, grid square/locator and frequency from the FreeDV Reporter servers in the dialog box.

The last selected logging source (either the FreeDV Reporter window or the drop-down callsign list at the bottom of the main window) is used for auto-filling of logging data. This is to avoid confusion (for instance, if a row in the main window is selected but it's intended to log from FreeDV Reporter instead).

9 FreeDV Modes

The following table is a guide to the different modes, using analog SSB and Skype as anchors for a rough guide to audio quality:

Mode	Min SNR	Fading	Latency	Speech Bandwidth	Speech Quality
SSB	0	8/10	low	2600	5/10
1600 (*)	4	3/10	low	4000	4/10
700D (*)	-2	4/10	high	4000	3/10
700E (*)	1	7/10	medium	4000	3/10
RADEV1	-2	8/10	medium	8000	7/10
Skype	-	-	medium	8000	8/10

(Note: Modes denoted by (*) above are considered “legacy” modes. These modes are hidden by default and RADEV1 automatically selected as RADEV1’s speech quality and resilience to band conditions are superior to the other modes. However, usage of the legacy modes is still possible by going to Tools->Options->Modem and selecting “Enable Legacy Modes.”)

The Min SNR is roughly the SNR where you cannot converse without repeating yourself. The numbers above are on channels without fading (AWGN channels like VHF radio). For fading channels the minimum SNR is a few dB higher. The Fading column shows how robust the mode is to HF Fading channels, higher is more robust.

The more advanced 700D and 2020 modes have a high latency due to the use of large Forward Error Correction (FEC) codes. They buffer many frames of speech, which combined with PC sound card buffering results in end-to-end latencies of 1-2 seconds. They may take a few seconds to sync at the start of an over, especially in fading channels.

9.1 Multiple Mode Support

FreeDV can simultaneously decode the following modes when selected prior to pushing “Start”:

- 700D
- 700E
- 1600

In addition, FreeDV can allow the user to switch between the above modes for transmit without having to push “Stop” first. These features can be enabled by going to Tools->Options->Modem and checking the “Simultaneously Decode All HF Modes” option. Note that this may consume significant additional CPU resources, which can cause decode problems.

By default, FreeDV will use as many threads/cores in parallel as required to decode all supported HF modes. On some slower systems, it may be necessary to enable the “Use single thread for multiple RX operation” option as well. This results in FreeDV decoding each mode in series and additionally short circuits the list of modes to be checked when in sync.

Additionally, the squelch setting with simultaneous decode enabled is relative to the mode that supports the weakest signals (currently 700D). The squelch for other modes will be set to a value higher than the slider (which is calculated by adding the difference between the “Min SNR” of 700D and the mode in question; see “FreeDV Modes” below). For example, the squelch for 700E when the squelch slider is set to -2.0 becomes 1.0dB. This is designed to reduce undesired pops and clicks due to false decodes.

9.2 FreeDV 700D

In mid 2018 FreeDV 700D was released, with a new OFDM modem, powerful Forward Error Correction (FEC) and optional interleaving. It uses the same 700 bit/s speech codec as the deprecated 700C mode. It operates

at SNRs as low as -2dB, and has good HF channel performance. It is around 10dB better than FreeDV 1600 on fading channels, and is competitive with SSB at low SNRs. The FEC provides some protection from urban HF noise.

FreeDV 700D is sensitive to tuning. To obtain sync you must be within +/- 60Hz of the transmit frequency. This is straightforward with modern radios which are generally accurate to +/-1 Hz, but requires skill and practice when used with older, VFO based radios.

9.3 FreeDV 700E

FreeDV 700E was developed in December 2020 using lessons learned from on air operation of 700C and 700D. A variant of 700D, it uses a shorter frame size (80ms) to reduce latency and sync time. It is optimized for fast fading channels with up to 4Hz Doppler spread and 6ms delay spread. FreeDV 700E uses the same 700 bit/s codec as FreeDV 700D. It requires about 3dB more power than 700D, but can operate reliably on fast fading channels.

The 700E release also includes optional compression (clipping) of the 700D and 700E transmit waveforms to reduce the Peak to Average Power Ratio to about 4dB. For example a 100W PEP transmitter can be driven to about 40W RMS. This is an improvement of 6dB over previous releases of FreeDV 700D. Before enabling the clipper make sure your transmitter is capable of handling sustained high average power without damage.

Clipping can be enabled via Tools-Options.

On good channels with high SNR clipping may actually reduce the SNR of the received signal. This is intentional - we are adding some pre-distortion in order to increase the RMS power. Forward error correction (FEC) will clean up any errors introduced by clipping, and on poor channels the benefits of increased signal power outweigh the slight reduction in SNR on good channels.

9.4 FreeDV RADEV1

RADE is a new mode with state-of-the-art performance, it is a contraction of Radio AutoencoDEr so-named because the modulation encoding uses a Machine-Learning method where the modulation and demodulation are achieved by training on a large number of speech samples over a modelled radio channel with typical propagation disturbances in phase and amplitude as found in HF radio. The speech is synthesised using the FARGAN neural vocoder (Frame-wise Auto-Regressive GAN) where GAN is a Generative Adversarial Network).

Unlike the previous FreeDV modes which all use QPSK modulation, the RADEV1 modulation produces an analog phase-amplitude output without defined constellation points. It has been chosen as it offers a combination of high speech quality together with reduced RF bandwidth and good resistance to fading and multipath HF radio channels.

When using RADEV1, the squelch settings in the main window are ignored. Instead, FreeDV only passes decoded audio if it's able to synchronize with the incoming signal.

10 Tools Menu

10.1 Tools - Filter

This section describes features on Tools-Filter.

Control	Description
Noise Suppression	Enable noise suppression, de-reverberation, AGC of mic signal using the Speex pre-processor
700D Auto EQ	Automatic equalization for FreeDV 700D/E Codec input audio

Auto EQ (Automatic Equalization) adjusts the input speech spectrum to best fit the speech codec. It can remove annoying bass artifacts and make the codec speech easier to understand.

Bass/Mid/Treble (for both microphone and speaker) can also be adjusted here, either with the arrow keys or your mouse. A graph displaying the frequency response of the signal based on your current settings will display in this window as well.

- [Blog Post on Auto EQ Part 1](#)
- [Blog Post on Auto EQ Part 2](#)

10.2 Tools - Options

10.2.1 Modem Options

Control	Description
Clipping	Increases the average power. Ensure your transmitter can handle high RMS powers before using!
TX Band Pass Filter	Reduces TX spectrum bandwidth

11 Helping Improve FreeDV

If you have an interesting test case, for example:

1. FreeDV working poorly with a particular person or microphone.
2. Poor over the air performance on a fast fading channel.
3. Problems with sync on strong signals.
4. A comparison with SSB.

Please send the developers an off air recording of the signal. FreeDV can record files from your radio using Tools-Record File from Radio. A recording of 30 to 60 seconds is most useful.

With a recording we can reproduce your exact problem. If we can reproduce it we can fix it. Recordings are much more useful than anecdotes or subjective reports like “FreeDV doesn’t work”, “SSB is better”, or “On 23 December it didn’t work well on grid location XYZ”. With subjective reports problems are impossible to reproduce, cannot be fixed, and you are unlikely to get the attention of the developers.

12 Multiple Panes in GUI window

It is possible to have multiple panes opened within the GUI window for example, to observe both the Waterfall and Spectrum Tabs. New panes may be added above, below, left or right of existing panes.

A new visible pane is created by hovering the cursor over the required Tab, click and hold the left mouse button and drag the Tab to the required position and releasing the mouse button. If currently two panes are stacked vertically a third pane may be added either beside either pane or to the left/right of both panes. If the Tab is required adjacent to both panes then it must be dragged to the left/right of the junction of the existing Tabs.

As the Tab is dragged into position a faint blue/gray image will show the position to be occupied by the pane. Panes may be relocated back to the menu bar by a similar process.

Tabs can be resized as required by hovering the cursor over the border and clicking and holding the left mouse button and dragging to required size.

By default, the tab layout is not saved. However, by enabling experimental features (see “Advanced/Developer Features”), experimental support for saving and restoring the tab layout will be enabled. This has not been well tested and may have hidden bugs or other issues.

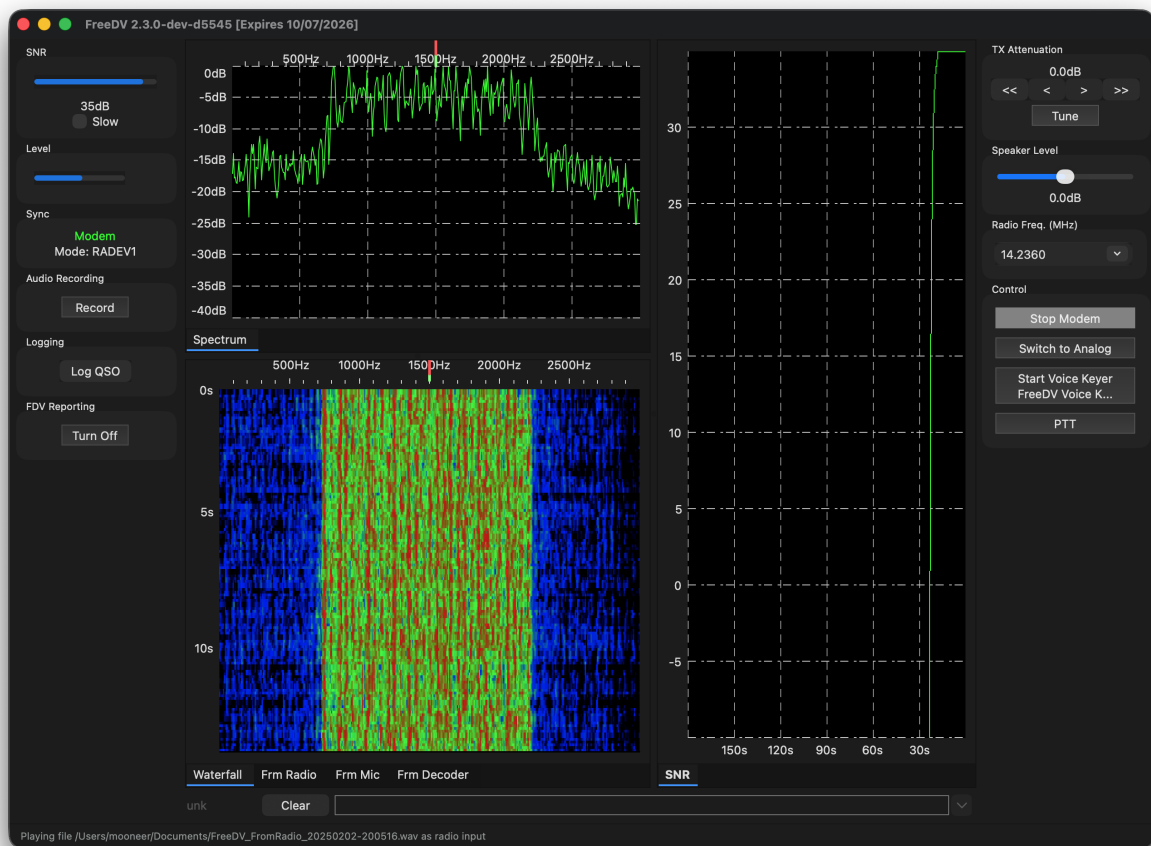


Figure 2: Multiple Panes

13 Advanced/Developer Features

13.1 Stats Window

Located on the lower left hand side of the main screen.

Term	Notes
Bits	Number of bits demodulated
Errs	Number of bit errors detected
Resyncs	Number of times the demodulator has resynched
ClkOff	Estimated sample clock offset in parts per million
FreqOff	Estimated frequency offset in Hz
Sync	Sync metric (OFDM modes like 700D/E)
Var	Speech encoder distortion for 700D (see Auto EQ)

The sample clock offset is the estimated difference between the modulator (TX) and demodulator (RX) sample clocks. For example if the transmit station sound card is sampling at 44000 Hz and the receive station sound card 44001 Hz, the sample clock offset would be $((44000-44001)/44000)*1E6 = 22.7$ ppm.

13.2 Timing Delta Tab

This indicates the symbol timing estimate of the demodulator, in the range of ± 0.5 of a symbol. With off air signals this will have a sawtooth appearance, as the demod tracks the modulator sample clock. The steeper the slope, the greater the sample clock offset.

- FreeDV 1600 Sample Clock Offset Bug
- Testing a FDMDV Modem

13.3 Sound Card Debug

These features were added for FreeDV 700D, to help diagnose sound card issues during development.

13.3.1 Tools - Options dialog:

Debug FIFO and PortAudio counters: used for debugging audio problems on 700D. During beta testing there were problems with break up in the 700D TX and RX audio on Windows.

The PortAudio counters (PortAudio1 and PortAudio2) should not increment when running in TX or RX, as this indicates samples are being lost by the sound driver which will lead to sync problems.

The Fifo counter outempty1 counter should not increment during TX, as this indicates FreeDV is not supplying samples fast enough to the PortAudio drivers. The results will be resyncs at the receiver.

Check these counters by pressing Start, then Reset them and observe the counters for 30 seconds.

If the PortAudio counters are incrementing on receive try:

1. Adjusting framesPerBuffer; try 0, 128, 256, 512, 1024.
2. Shut down other applications that might be using audio, such as Skype or your web browser.
3. A different sound card rate such as 44.1kHz instead of 48kHz.

If the outempty1 counter is incrementing on transmit try increasing the FifoSize.

The txThreadPriority checkbox reduces the priority of the main txRX thread in FreeDV which may help the sound driver thread process samples.

The txRXDumpTiming check box dumps timing information to a console that is used for debugging the RX break up problem on 700D. Each number is how many ms the txRXThread took to run.

The txRXDumpTiming check box dumps the number of samples free in the TX FIFO sending samples to the TX. If this hits zero, your TX audio will break up and the RX will lose sync. TX audio break up will also occur if you see “outfifo1” being incremented on the “Fifo” line during TX. Try increasing the FifoSize.

13.4 Full Duplex Testing with loopback

Tools - Options - Half Duplex check box

FreeDV GUI can operate in full duplex mode which is useful for development or listening to your own FreeDV signal as only one PC is required. Normal operation is half duplex.

TX and RX signals can be looped back via an analog connection between the sound cards.

On Linux, using the ALSA loopback module:

```
$ sudo modprobe snd-aloop
$ ./freedv
```

```
In Tools - Audio Config - Receive Tab - From Radio select -> Loopback: Loopback PCM (hw:1,0)
- Transmit Tab - To Radio select -> Loopback: Loopback PCM (hw:1,1)
```

13.5 Experimental Features

Occasionally there are some features that may be unstable or otherwise not ready to officially be released. To experiment with these features, you can go to Tools->Options->Debugging and enable “Enable Experimental Features”. Note that if you have problems after enabling this setting, it is recommended to disable it again to verify that an experimental feature is not causing trouble. (Additionally, if you’re able to confirm that an experimental feature is causing problems, please file a bug report!)

14 Tips

1. The space bar can be used to toggle PTT.
2. For modes other than RADEV1, you can left click on the main window to adjust tuning. The vertical red line on the frequency scale will show the current center frequency and FreeDV will automatically track any drift once it syncs.

15 Common Problems

15.1 FreeDV Sets Radio To Wrong Mode

By default, FreeDV attempts to set the radio’s mode to DIGU/USB-D (or LSB equivalent for 40 meters and below). Some radios do not support data modes and only have USB and LSB. For these, you can go to Tools->Options->Rig Control and check the “Use USB/LSB instead of DIGU/DIGL” option. This will cause FreeDV to use the standard USB and LSB modes for rig control instead.

Note that for best results, your radio should have all processing disabled if you’re using the standard USB/LSB modes. This disabling of processing typically takes place when using data mode.

15.2 Overdriving Transmit Level

This is a very common problem for first time FreeDV users. Adjust your transmit levels so the ALC is just being nudged. More power is not better with FreeDV. An overdriven signal will have poor SNR at the receiver. For FreeDV 700D/700E operation with the clipper, make sure your transmitter can sustain high average power levels without damage (e.g. 40W RMS on a 100W PEP radio).

15.3 I can’t set up FreeDV, especially the Sound Cards

This can be challenging the first time around:

1. Try a receive only (one audio card) set up first.
2. Ask someone who already runs FreeDV for help.
3. If you don’t know anyone local, ask for help on the digital voice mailing list. Be specific about the hardware you have and the exact nature of your problem.

15.4 Hamlib does not work with my Icom radio

The most common issue with Icom radios is that the CI-V address configured in FreeDV does not match the address configured in the radio. Ensure that the CI-V address in both FreeDV and on the radio are the same. If “00” is used on the FreeDV side, ensure that the “CI-V Transceive” option is enabled on the radio or else the radio will not respond to requests directed to that address.

On newer radios (e.g. 7300, 7610), you may also need to set “CI-V USB Echo Back” to ON as this may be set to OFF by default.

15.5 Hamlib seems not reliable on my Linux machine

Some Linux distributions come with pre-installed software that may try to use serial ports that your radio creates. You may have problems initialising your radio or CAT control via hamlib may seem unreliable or time out.

Brltty is software that looks on serial ports for a Braille device which will also upset CAT communication with your radio. Typically this is seen as a timeout error window from hamlib.

Stop BRLTTY as follows:

```
sudo systemctl stop brltty-udev.service
sudo systemctl disable brltty.service
sudo systemctl mask brltty-udev.service
```

BRLTTY is the most common cause of communication problems but it's also been reported that in some cases ModemManager can give trouble.

ModemManager is on some Ubuntu based distributions and it will try to reset a modem by sending AT commands which will upset your radio.

Stop ModemManager as follows:

```
sudo systemctl stop ModemManager
sudo systemctl disable ModemManager
sudo systemctl mask ModemManager
```

15.6 I'm using OmniRig and have problems with rig control

If you're using OmniRig and have problems getting rig control to work, please attempt to update the INI files for OmniRig. These can be found by going [here](#) and clicking on the "INI files for OmniRig" link. There may also be a newer OmniRig version available at that same link which could work better if you are running an older version.

15.7 I need help with my radio or rig interface

There are many radios, many computers, and many sound cards. It is impossible to test them all. Many radios have intricate menus with custom settings. It is unreasonable to expect the authors of FreeDV to have special knowledge of your exact hardware.

However someone may have worked through the same problem as you. Ask on the digital voice mailing list.

15.8 Can't hear anything on receive

Many FreeDV modes will not play any audio if there is no valid signal. You may also have squelch set too high. In some modes the **Analog** button will let you hear the received signal from the SSB radio.

Try the Test Wave Files above to get a feel for what a FreeDV signal looks and sounds like.

15.9 Hearing myself whenever I transmit

Verify audio device settings in FreeDV. If your audio settings are correct, there are a few other possibilities:

1. If on Windows, make sure all audio effects are disabled on all devices used with FreeDV.
2. Turn off TX monitoring (right-click on PTT button and make sure "Monitor transmitted audio" is unchecked).

15.10 The signal is strong but FreeDV won't get sync and decode

Do you have the correct sideband? See USB or LSB section.

Is it a FreeDV signal? SSTV uses similar frequencies. To understand what FreeDV sounds like, see the Test Wave Files section.

15.11 Trouble getting Sync with 700D

You need to be within +/- 60 Hz on the transmit signal. It helps if both the TX and RX stations tune to known, exact frequencies such as exactly 7.177MHz. On channels with fast fading sync may take a few seconds.

15.12 PTT doesn't work. It works with Fldigi and other Hamlib applications.

Many people struggle with initial CAT control and PTT setup:

1. Read the "CAT/PTT Configuration" section above.
2. Try the "Test PTT" button inside Tools->CAT and PTT Config.
3. Check your rig serial settings. Did you change them from defaults for another program?
4. Linux version: do you have permissions for the serial port? Are you a member of the dialout group?
5. Ask someone who already uses FreeDV to help.
6. Contact the digital voice mailing list. Be specific about your hardware, what you have tried, and the exact nature of the problem.

15.13 I'm on Windows and serial port PTT doesn't work with my USB to serial adapter.

Please verify that you are running the correct drivers for the USB to serial adapter that you're using. Information and download links for the drivers used by the most common devices can be found [here](#).

While it is preferred to use devices that use authorized/original versions of the various USB to serial chipsets, it is possible to use some cloned devices with older drivers. When doing this, you may also need to force Windows to use an older version of a driver instead of automatically updating the driver on reboot. See [here](#) for instructions on doing so in Windows 10. For Windows 8:

1. Search for "Change device" in the Windows 8 Start menu.
2. Click on where it says "Change device installation settings".
3. Select the "No, let me choose what to do" option.
4. Check the "automatically get the device app" option, then click Save changes to save the settings you just chose.

15.14 I installed a new version and FreeDV stopped working

You may need to clean out the previous configuration. Try Tools - Restore Defaults. Set up your sound cards again with Tools - Audio Config.

15.15 FreeDV crashes when I press Start

Have you removed/changed USB audio devices? If you remove/change USB audio devices without pressing Tools - Audio Config, FreeDV may crash. See Changing Audio Devices above.

15.16 FreeDV can't be opened on macOS because the developer cannot be verified

From January 2020 Apple is enforcing notarization for all macOS applications. While official releases of FreeDV are signed, other types of builds may not be. This may result in a dialog box similar to the below:



Figure 3: Notarization Error

(or on later releases of macOS) a message indicating that the FreeDV binary is “corrupt”. To override the notarization requirement and execute FreeDV, run the following from Terminal:

```
xattr -d com.apple.quarantine FreeDV.app  
or  
xattr -d -r com.apple.quarantine FreeDV.app
```

15.17 I’m on a Mac and my preferred audio device isn’t appearing

macOS has a longstanding issue that prevents certain audio devices from appearing. More info [here](#).

15.18 FreeDV doesn’t preserve window positions on Linux

Many Linux distributions are switching away from X11 and towards a new GUI system known as Wayland. Wayland explicitly does not support window positioning by applications, instead leaving it to the user’s compositor to control window positioning. You can force use of X11 via the Xwayland compatibility layer by adding `GDK_BACKEND=x11` to your environment to regain the ability to preserve window positioning if desired.

16 Converting this document to PDF

For the Linux inclined:

```
$ pandoc USER_MANUAL.md -o USER_MANUAL.pdf "-fmarkdown-implicit_figures -o" \  
--from=markdown -V geometry:margin=.4in --toc --highlight-style=espresso
```

17 Glossary

Term	Notes
AWGN	Additive White Gaussian Noise - a channel with just noise and no fading (like VHF)
FEC	Forward Error Correction - extra bits to we send to protect the speech codec bits
LDPC	Low Density Parity Check Codes - a family of powerful FEC codes

18 Release Notes

18.1 V2.4.0 TBD 2026

1. Bugfixes:
 - Hamlib: Allow one timeout during connection process to allow Icom marine radios to behave better. (PR #1369)
 - Rename sanitizers.h->freedv_sanitizers.h due to name conflicts. (PR #1372)
 - Fix intermittent non-response to short PTT clicks to stop TX. (PR #1375) - thanks @barjac!
 - Revert to libsamplerate library to fix remaining audio quality issues. (PR #1379)
2. Enhancements:
 - Add UDP broadcast of received callsigns. (PR #1367)
 - Load last-used config file on restarts. (PR #1365, #1371)
 - Add “Set tune output to minimum” to Tune button context menu for safety. (PR #1378) - thanks @barjac!
 - Move Tune button into Control widget for improved usability. (PR #1377) - thanks @barjac!
 - Restore heard station list on launch. (PR #1358) - thanks @barjac!
3. Build system:
 - Clear CMake deprecation warnings in FreeDV. (PR #1383)
4. Other:
 - FlexRadio/KA9Q integrations moved to freedv-integrations repo. (PR #1368)

18.2 V2.3.1 May 2026

1. Bugfixes:
 - Fix TX/tune level context menus on Linux distros using wxWidgets <= 3.2. (PR #1333) - thanks @barjac!
 - Fix audio routing problems on Windows due to hardware offloading. (PR #1335)
 - Hamlib: Detect empty rig name on start. (PR #1339, #1351) - thanks @barjac!
 - Fix missing Hamlib defines when building from source (PR #1353) - thanks @barjac!
 - FreeDV Reporter: Fix issue preventing mode changes on double-click. (PR #1343)
 - Fix compiler warning/error in EventHandler when using GCC 16.1. (PR #1347)
 - Improve Flex waveform RX audio quality. (PR #1338, #1348, 1356)
 - Flex: Use version number without Git hash for waveform registration. (PR #1359)
 - Fix intermittent CSV logging corruption. (PR #1361)
 - Hamlib: Fix bug preventing frequency change after changing on the radio. (PR #1363)
 - KA9Q: Remove custom AppRun script causing audio distortion. (PR #1364)
2. Enhancements:
 - Allow use of a custom key for PTT. (PR #1309)
 - Improve Reporter message list usability. (PR #1310) - thanks @barjac!
 - Clarify Reporter on/off tooltip. (PR #1345)

18.3 V2.3.0 May 2026

1. Bugfixes:
 - Linux: fix semaphore wakeup timing to reduce audio dropouts. (PR #1220)
 - FreeDV Reporter: Fix display issues on non-English systems. (PR #1217)
 - Update audio device list in Easy Setup after opening advanced audio setup. (PR #1223)

- Easy Setup: Fix crash while displaying Hamlib error. (PR #1224)
 - Force numpy to 2.3.x due to illegal instruction errors. (PR #1230)
 - FreeDV Reporter: Disable autosizing enable/disable on Linux. (PR #1231)
 - Improve reliability of Start/Stop and PTT buttons. (PR #1236)
 - Hamlib: Reenable FLRig/rigctl timeouts. (PR #1233)
 - Hamlib/OmniRig: Ignore frequency/mode query during TX. (PR #1246)
 - Fix audio dropouts on Linux. (PR #1266)
 - OmniRig: Use frequency from VFO if we get a zero frequency. (PR #1274)
 - Fix bugs related to display of Mic/Speaker Level slider. (PR #1281) - thanks @barjac!
 - Fix bug causing main window's menu to disappear when Reporter is displayed. (PR #1282)
 - Flex: Prevent multiple slices from being in FreeDV mode. (PR #1270)
 - Further improve audio dropouts. (PR #1287)
 - FreeDV Reporter: Fix inability to use mouse wheel on Msg column. (PR #1289)
 - Fix RADE related compiler errors. (PR #1299)
 - Logging: fix incorrect time when using UTC due to DST. (PR #1302) - thanks @barjac!
 - Ensure that PTT is actually off when opening Hamlib connection. (PR #1308)
 - Fix race condition preventing frequency/mode from changing on start with SmartSDR 4.2. (PR #1314, #1320, #1321, #1322)
 - Fix inability to open web browser in AppImages (e.g. when viewing callsign info). (PR #1326)
2. Enhancements:
- FreeDV Reporter: Use ItemsAdded/ItemsDeleted instead of Cleared() for performance. (PR #1212)
 - Optimize "From XXX" plot performance. (PR #1238, #1239)
 - Logging: Send WSJT-X 'Decode' message to indicate RX'd SNR. (PR #1248)
 - Remove Python from RADE implementation to improve performance. (PR #1251)
 - Add ability to hide self from FreeDV Reporter list. (PR #1260, #1278)
 - Add Tune button to allow tuning antennas/rigs. (PR #1259, #1265, #1317, #1322)
 - Add SNR plot to main window. (PR #1250, #1261)
 - Bring back RX frequency indicator for RADE. (PR #1265, #1283)
 - Improve usability of attenuation control in the main window. (PR #1268) - thanks @barjac!
 - Use RNNoise for improved noise canceling during TX. (PR #1276, #1307)
 - FreeDV Reporter: Add ability to filter based on individual columns. (PR #1285)
 - Improve spectrum and waterfall plot appearance on small displays. (PR #1288) - thanks @barjac!
 - Add optional per-band TX attenuation saving. (PR #1284, #1323) - thanks @barjac!
 - Log heard callsigns to a CSV file. (PR #1290, #1293)
 - Add ability to load and save different FreeDV configurations. (PR #1296)
 - Hamlib: Add options to force RTS and DTR on. (PR #1292)
 - Add recognition of SmartSDR 4.2+ DAX devices to Easy Setup. (PR #1306)
 - Easy Setup: Also emit audio tone through speakers. (PR #1033)
 - Switch to r8brain for audio resampling. (PR #1307)
3. Build system:
- Update Python to 3.14.3. (PR #1221)
 - Update Hamlib to 4.7.1. (PR #1226, #1314)
 - Update wxWidgets to 3.3.2. (PR #1244)
 - Flex: Update Docker container version to match AppImage version. (PR #1256)
 - Reenable Windows on ARM builds previously disabled in 2.0.0. (PR #1297, #1300)
 - Add automated code signing support for Windows builds. (PR #1312)
4. Documentation:
- Update README instructions to reflect current Windows build steps. (PR #1232)
 - Add OmniRig troubleshooting to the user manual. (PR #1264)
 - Update FlexRadio waveform README to reflect SmartSDR 4.2 release. (PR #1311)
5. Other:
- Audio resampling logic consolidated in one location for ease of maintenance. (PR #1286, #1307)

18.4 Earlier than V2.2.0

See this for more information about changes in versions prior to 2.2.0.

19 References

- [FreeDV Web site](#)
- [FreeDV Technology Overview](#)
- [Digitalvoice mailing list](#)